


TRIM OVERLAPPED PANELS AT BACK OF BLOCK FACE TO REDUCE OVERLAP. WHERE AREAS OF OVERLAP OCCUR, PLACE AT LEAST 2 INCHES OF REINFORCED FILL BETWEEN GRID LAYERS.

PLACE ADDITIONAL PANEL AT CORNER TO PROVIDE 100% GEOGRID COVERAGE OF REINFORCED FILL. THIS PANEL SHOULD BE PLACED ONE COURSE ABOVE MAIN REINFORCEMENT.

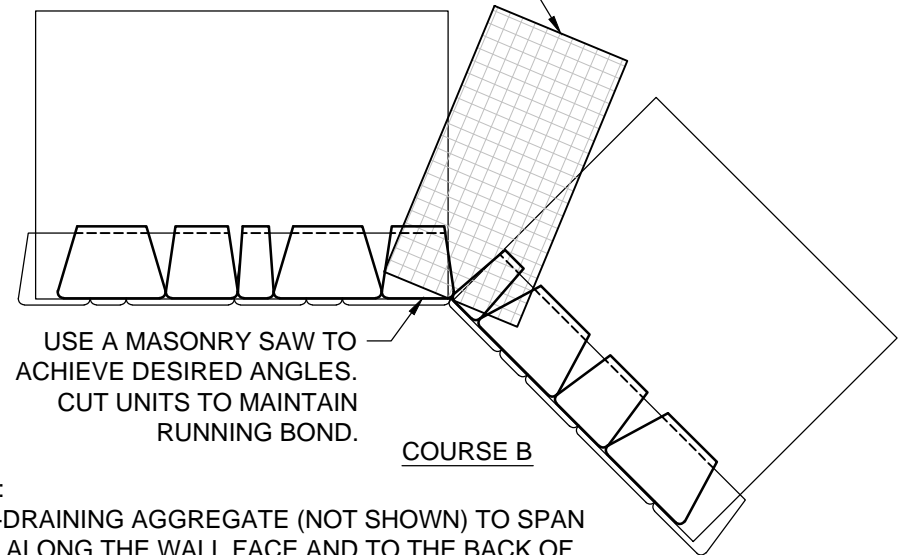

USE A MASONRY SAW TO ACHIEVE DESIRED ANGLES. CUT UNITS TO MAINTAIN RUNNING BOND.

NOTE:
FREE-DRAINING AGGREGATE (NOT SHOWN) TO SPAN 10 FT. ALONG THE WALL FACE AND TO THE BACK OF THE REINFORCED ZONE