




PROJECT INSTRUCTIONS

CONSOLE BASE

- Remove the rear lips from the Brisa retaining wall units and layout on the patio as shown

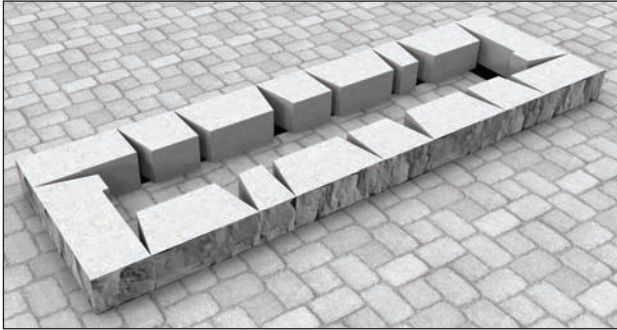

- Continue with course two and three knocking off the lips and gluing each course vertically.
- Cap the console base with the ShortCut® sculpted cap.




CONSOLE TOP

- Apply adhesive and install the Highland Stone freestanding wall units as shown. Leave the opening wide enough to accommodate the TV you are installing. Cut pieces as needed to fit layout.



- Continue installing the Highland Stone freestanding wall units to reach the height of the TV.

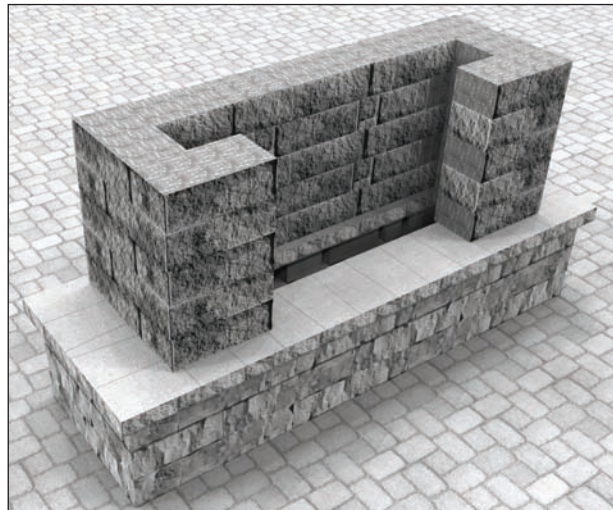

- Cap the unit with natural stone or a poured concrete slab.

